

# How to Measure for Custom Curtains

Get perfectly fitting curtains every time with these simple measuring steps. Follow this visual guide to ensure your custom curtains look stunning and function flawlessly.

## Tools You'll Need




### Steel Measuring Tape

More accurate than cloth for long drops



### Pencil & Paper


Write down measurements—always measure twice!

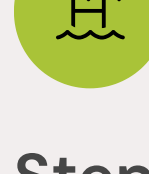

### Step Ladder

Safe access for high window measurements

## Step 1: Rod Placement Height

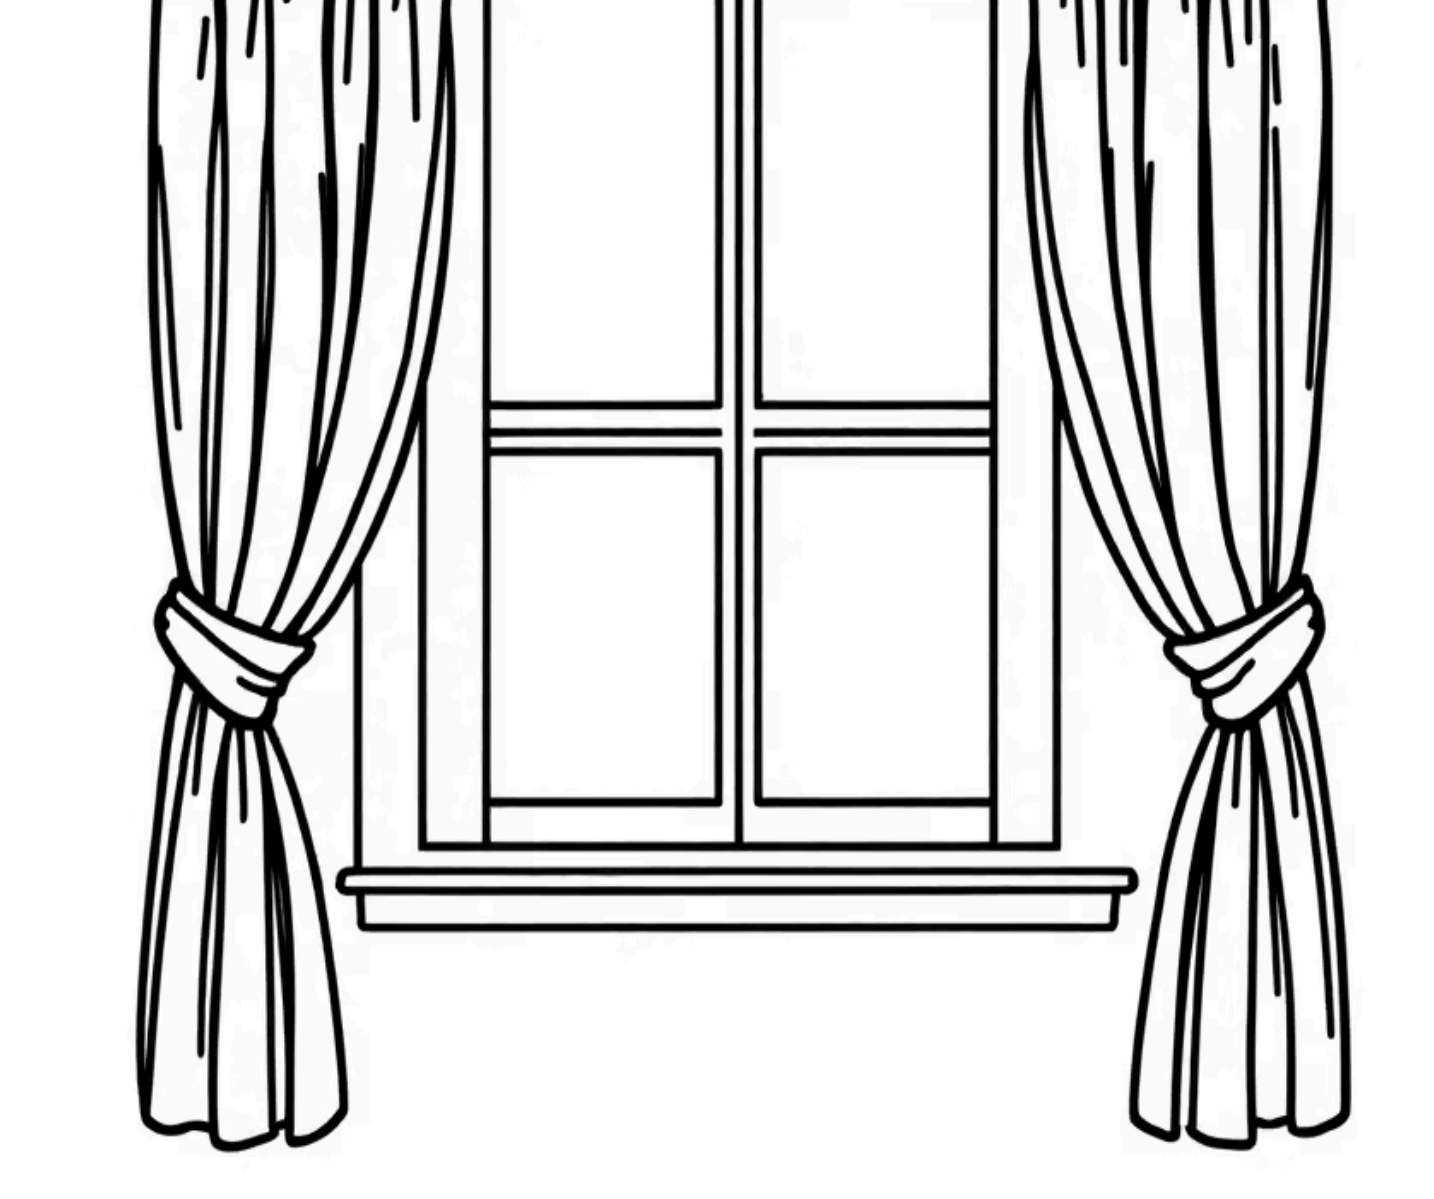

**Ideal height:** 15–20 cm above window trim

**Dramatic look:** Mount closer to ceiling

Mark this spot—it's your **top mounting point**

**Pro Tip:** Higher placement makes ceilings appear taller and rooms more elegant

## Step 2: Measure the Width



01

### Measure window frame width

Get the exact measurement of your window opening

02

### Add extension on each side

**Standard windows:** Add 20–30 cm per side

**Large windows (3m+):** Add 50 cm per side


03

### Calculate total rod length

This ensures curtains stack on walls, not glass—better light blocking!

## Step 3: Measure the Length (Drop)


Measure from your **top mounting point** down to desired hem position:

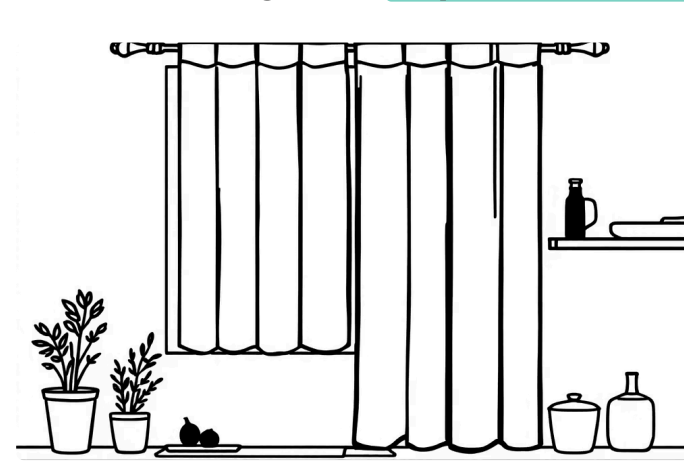

### Short Curtain Length

10 cm below the window sill


Perfect for kitchens and bathrooms

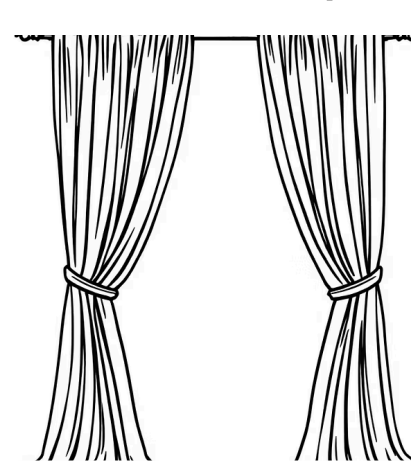

### Floor Length

2 cm above the floor

Most popular choice—clean and modern

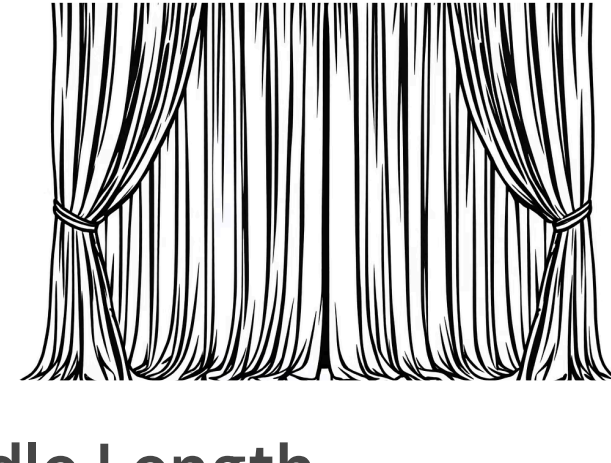

### Puddle Length

15–25 cm on the floor

Dramatic, traditional, luxurious look

## Ready to Order?

Contact **Nina Interiors** with your measurements for a quote on stunning custom curtains

